

Troubleshooting

Engine Will Not Start	P. 149		
Overheating (Segment H flashes in coolant temperature gauge)	P. 150		
Warning Indicators On or Flashing	P. 151		
Low Oil Pressure Indicator	P. 151		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 151		
ABS (Anti-lock Brake System) Indicator	P. 152		
Torque Control Indicator.....	P. 153		
If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 154		
Other Warning Indications	P. 155		
Fuel Gauge Failure Indication.....	P. 155		
		Coolant Temperature Gauge Failure	
		Indication	P. 156
		Handle Grip Heater Failure Indication	P. 156
		Tire Puncture	P. 157
		Electrical Trouble	P. 166
		Battery Goes Dead.....	P. 166
		Burned-out Light Bulb	P. 166
		Blown Fuse.....	P. 169