



- 4 Return to the riding information, previous screen or Home screen. **P.38**
- You can also perform the above settings by using the touch screen.

Available settings: [Off] (disable)/[Low]/[High]

Default: [Off] (disable)

To adjust the volume:

- 1 Select [Volume], and then press the **ENT** switch.
- 2 Press the ▲ sel up switch or ▼ sel down switch to select a setting menu.
- 3 Push the ◀ or ▶ of the ◀ ▶ sel left/right switch to select your preferred level.
u Push and hold the ◀ or ▶ of the ◀ ▶ sel left/right switch to advance the figure fast.

