











Honda selectable torque control *(Continued)*

Torque Control level setting

- When using the  favorite switch:
 - ① Stop the vehicle.
 - ② Select the [HSTC] of the  favorite switch. 
 - ③ Press the  favorite switch.
- u 7: the maximum Torque Control level
u 1: the minimum Torque Control level



- When using the multi-information display:
 - ① Stop the vehicle.
 - ② Select the gold image display. 
 - ③ Select page 4. 
 - ④ Press the **ENT** switch.
 - ⑤ Select [HSTC].
 - ⑥ Push the  or  of the   sel left/right switch to select your preferred level.

