

## To Reset the Average Fuel Mileage

### [AVG. CONS.]

To reset the average fuel mileage [AVG. CONS.], press and hold the **ENT** switch while page 3 is displayed or touch and hold the page 3 area.

| 1                  | 2 | 3               | 4 |
|--------------------|---|-----------------|---|
| <b>INST. CONS.</b> |   | <b>30.0 mpg</b> |   |
| <b>AVG. CONS.</b>  |   | <b>45.0 mpg</b> |   |
| <b>CONS.</b>       |   | <b>1.0 gal</b>  |   |
| <b>ELAPSED</b>     |   | <b>02:42</b>    |   |