


 **ABS (Anti-lock Brake System) indicator**

- Comes on briefly when the ignition switch is turned to the ON position.
- Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding:  **P.294**

 **Rear ABS (Anti-lock Brake System) OFF Indicator**

- Comes on briefly when the ignition switch is turned to the ON position.
- Comes on when the ABS function on the rear wheel is turned off.  **P.118**

 **SET Cruise control SET indicator**

Comes on if you have set a speed for cruise control.

Cruise Control:  **P.210**

 **Cruise control main indicator**

Comes on when you press  cruise control main switch.

Cruise Control:  **P.210**