

Starting & Stopping the Engine

Always follow the proper starting procedure described below.

Preparation

Before starting, insert the key and turn the ignition switch I (ON).

Make sure that the transmission is in neutral, the engine stop switch is at ○ (RUN) and the PGM-FI malfunction indicator lamp (MIL) is off.