

Maintenance Schedule

Items	Frequency	Whichever Comes First		Initial Maint.	Regular Maint. Interval				Refer to page:
		⇒	mi		600	1,200	1,800	2,400	
			km	150	1,000	2,000	3,000	4,000	
		Note	Month	1	6	12	18	24	
*	Fuel Line					I		I	–
**	Fuel Filter				R: every 4,800 mi (8,000 km)				–
*	Throttle Operation					I		I	71
	Air Cleaner	Note 1			C	C	C	C	67
	Crankcase Breather				I	I	I	I	70
	Spark Plug				I	I	I	I	79
*	Valve Clearance			I	I	I	I	I	76
	Engine Oil			R	R	R	R	R	61
**	Engine Oil Strainer Screen					C		C	–
**	Engine Oil Centrifugal Filter					C		C	–
**	Engine Idle Speed			I	I	I	I	I	–

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 157).

** In the interest of safety, we recommend these items be serviced only by your dealer.

(cont'd)