

Maintenance Schedule

Items	Frequency	Whichever Comes First		Initial Maint.	Regular Maint. Interval				Refer to page:
		↪	mi		600	1,200	1,800	2,400	
			km	150	1,000	2,000	3,000	4,000	
		Note	Month	1	6	12	18	24	
	Drive Chain	Note 1		I, L	I, L: every 300 mi (500 km) or 3 month				103
	Drive Chain Slider				I	I	I	I	104
	Brake Shoes Wear				I	I	I	I	91
	Brake System			I	I	I	I	I	87
	Clutch System			I	I	I	I	I	74
	Side Stand					I		I	102
*	Suspension					I		I	84
*	Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours				81
*	Nuts, Bolts, Fasteners			I		I		I	–
**	Wheels/Tires			I	I	I	I	I	93, 98
**	Steering Head Bearings			I		I		I	–

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 157).

** In the interest of safety, we recommend these items be serviced only by your dealer.