

6. Pour clean Pro Honda Foam Filter Oil or an equivalent (Canada: Honda Foam Filter Oil or an equivalent) over the entire surface of the air cleaner. Use both hands to evenly spread the oil into the air cleaner. Gently squeeze out any excess oil. (To keep your hands dry, place the air cleaner in a clean plastic bag before spreading the oil into the air cleaner.)
7. Clean the inside of the air cleaner housing. Install the air cleaner, aligning the hole (4) of air cleaner with the boss (5) of air cleaner housing.
8. Install the air cleaner housing cover and bolts to the specified:  
1.1 lbf·ft (1.5 N·m , 0.2 kgf·m)
9. Install the left fuel tank shroud (page 55).