

6. Install the spark arrester and the new gasket in the muffler and tighten the bolts to the specified torque:  
**7 lbf·ft (10 N·m , 1.0 kgf·m)**
7. Install the muffler protector, aligning slots (9) with the tabs (10) on the muffler. Install the muffler protector screw and collar and tighten the screw to the specified torque:  
**6.6 lbf·ft (9 N·m , 0.9 kgf·m)**
8. Install the right side cover (page 56).