

Servicing Your Honda

Service Preparations

Maintenance Component Locations	52
Tools	55
Seat Removal.....	56
Left Side Cover Removal	57

Service Procedures

Fluids & Filters

Fuel	58
Engine Oil.....	61
Air Cleaner	67
Crankcase Breather.....	71

Engine

Throttle.....	72
Clutch System	74
Engine Idle Speed	77
Spark Plug.....	78
Spark Arrester	80

Chassis

Suspension	82
Brakes.....	85
Wheels.....	93
Tires & Tubes.....	99
Side Stand	103
Drive Chain	104

Electrical

Battery	111
---------------	-----

Appearance Care	116
-----------------------	-----