


The battery is located in the battery compartment under the seat.

## Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat and left side cover (pages 56, 57).
3. Disconnect the negative (-) terminal lead (1) from the battery first, then disconnect the positive (+) terminal lead (2).
4. Release the battery holder band (3) from the hook.
5. Pull the battery (4) out of the battery compartment.

## UNDER SEAT

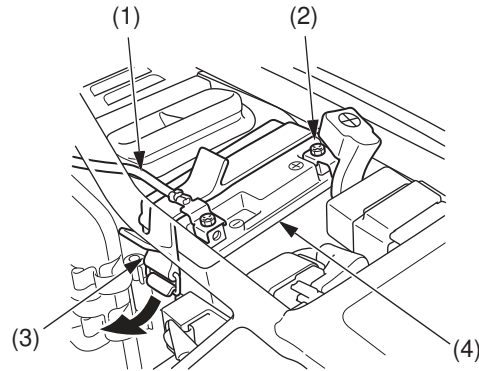

- (1) negative (-) terminal lead
- (2) positive (+) terminal lead
- (3) battery holder band
- (4) battery