

# Starting & Stopping the Engine

---

Always follow the proper starting procedure described below.

Your motorcycle can be started with the transmission in gear by pulling in the clutch lever before operating the start button.

## Preparation

Before starting, insert the key and turn the ignition switch to the **I** (ON) position, and confirm the following:

- The transmission is in neutral.
- The engine stop switch is at **⊙** (RUN).
- The PGM-FI malfunction indicator lamp (MIL) is off.