

Starting & Stopping the Engine

Always follow the proper starting procedure described below.

Your motorcycle can be started with the transmission in gear by pulling in the clutch lever before operating the start button.

Preparation

Before starting, insert the key and turn the ignition switch to the **I** (ON) position, and confirm the following:

- The transmission is in neutral.
- The engine stop switch is at **⊙** (RUN).
- The PGM-FI malfunction indicator lamp (MIL) is off.