

Maintenance Schedule

Items		Frequency	Whichever Comes First	Initial Maint.	Regular Maint. Interval					Refer to page:
			⇒	mi	100	600	1,200	1,800	2,400	
				km	150	1,000	2,000	3,000	4,000	
		Note	Month	1	6	12	18	24		
	Drive Chain	Note 1		I, L	I, L: every 300 mi (500 km) or 3 months					103
	Drive Chain Slider				I	I	I	I		104
	Brake Fluid	Note 2			I	I	I	I		85
	Brake Shoes/Pads Wear				I	I	I	I		87,90
	Brake System			I	I	I	I	I		84
	Clutch System			I	I	I	I	I		74
	Side Stand					I		I		102
*	Suspension					I		I		81
*	Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours						79
*	Nuts, Bolts, Fasteners			I		I		I		—
**	Wheels/Tires			I	I	I	I	I		92, 98
**	Steering Head Bearings			I		I		I		—

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 162).

** In the interest of safety, we recommend these items be serviced only by your dealer.