

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval					Refer to page:
			mi	600	1,200	1,800	2,400		
		km	1,000	2,000	3,000	4,000			
		Note	Month	1	6	12	18	24	
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months					105
	Drive Chain Slider			I	I	I	I	I	106
	Brake Fluid	Note 2		I	I	I	I	I	87
	Brake Shoes/Pads Wear			I	I	I	I	I	89, 92
	Brake System		I	I	I	I	I	I	86
	Clutch System		I	I	I	I	I	I	75
	Side Stand				I			I	104
*	Suspension				I			I	83
*	Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours					81
	Nuts, Bolts, Fasteners			I	I	I	I	I	—
**	Wheels/Tires			I	I	I	I	I	94, 100
**	Steering Head Bearings			I		I		I	—

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 162).

** In the interest of safety, we recommend these items be serviced only by your dealer.