

Operating Controls

Start Button



The start button is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, [page 29](#) .

When the start button is pushed, the starter motor will crank the engine.

Engine Stop Button



The engine stop button is used to turn the engine off during normal riding situations. To operate, push the button in and hold it in until the engine stops completely.

Front Brake Lever

The front brake lever is used to slow or stop your motorcycle. To operate, pull the lever. For information on braking techniques, see [page 35](#) .

Throttle

The throttle controls engine rpm (speed). To increase engine rpm, rotate the grip toward you. To reduce engine rpm, rotate the grip away from you. The throttle will automatically return to the closed position (engine idle) when you remove your hand.