

# Starting & Stopping the Engine

---

## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Push the choke lever down all the way to OFF.
2. Open the throttle fully.
3. While pushing the engine stop button, press the start button for 5 seconds.
4. Release the engine stop button.
5. Follow the *High Air Temperature* starting procedure (page 30).