


Indicators

N Neutral indicator


Comes on when the transmission is in Neutral.




High coolant temperature indicator


Comes on briefly when the ignition switch is turned on with the engine stop switch in the RUN  position.

If it comes on while riding:  P.79

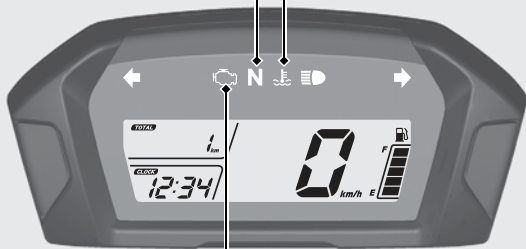

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the RUN  position.

If it comes on while engine is running:  P.80