


Battery

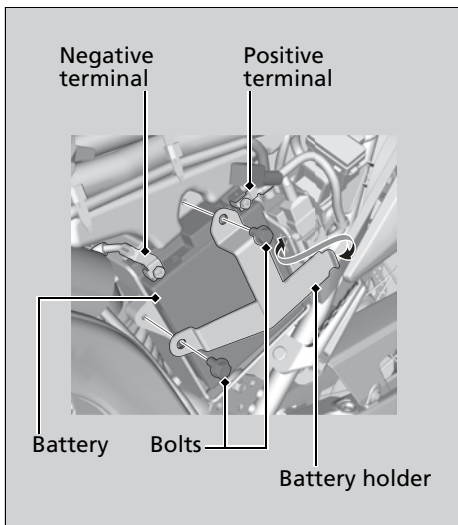

Removal

Make sure the ignition switch is off.

1. Remove the left side cover. ► P. 54
2. Remove the bolts.
3. Remove the battery holder.
4. Disconnect the negative $\ominus$ terminal from the battery.
5. Disconnect the positive $\oplus$ terminal from the battery.
6. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive $\oplus$ terminal first. Make sure that bolts and nuts are tight. The clock will be maintained for 30 minutes and reset to 1:00 if the battery is disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." ► P. 43
Battery Goes Dead. ► P. 88