

G

gap, spark plug63
 gasohol149
 gasoline.....40
 gearing133
 guidelines,
 steering damper130
 suspension adjustment126

H

handlebar inspection.....101
 Honda,
 contacting157
 Rider’s Club159
 service manual.....156
 your dealer.....158

I

identification, vehicle144
 idle speed, engine57
 indicator,
 MIL blink7
 circuit inspection8
 DTC index.....9
 inspection, pre-ride.....13
 instruments5

L

labels, safety4
 logbook, competition.....150

M

maintenance,
 after competition30
 before & after competition.....30
 between motos & practice.....30
 component locations32
 general competition.....26
 importance.....22
 safety23
 schedule.....24
 manual, service.....156
 modifications3

O

oil,
 engine45
 fork83
 transmission48
 operating instructions15
 operation component locations6
 optional,
 parts list152
 sprockets.....133
 oxygenated fuels.....149

P

pads, brake.....89
 parts, optional152
 personal fit adjustments135
 pinging, engine40
 plug, spark63
 pre-load, rear suspension.....121
 pre-ride inspection.....13
 protective apparel2

R

rear suspension maintenance.....121
 Rider’s Club Honda (USA only).....159
 riding,
 apparel2
 basic operation15
 before.....11
 important safety information.....2
 safety precautions.....2

S

safety,
 a few words aboutSafety Messages
 important information2
 important precautions.....2
 labels4
 maintenance.....23
 riding precautions.....16
 schedule, maintenance.....24
 seat33
 serial numbers144
 service,
 customer158
 manuals156
 spare parts.....153
 spark knock40
 spark plug,
 maintenance.....63
 reading.....129
 specifications145
 spring pre-load, rear suspension121
 starting,
 engine17
 troubleshooting.....141
 steering damper,
 adjustment130
 guidelines131
 operation inspection.....100
 steering stem inspection103

(cont’d)