


Fuel Pressure Relieving

1. Hang the fuel tank to the left side of the frame (page 35).
2. Release the fuel pump connector A (1) from the stay (2) and disconnect it.

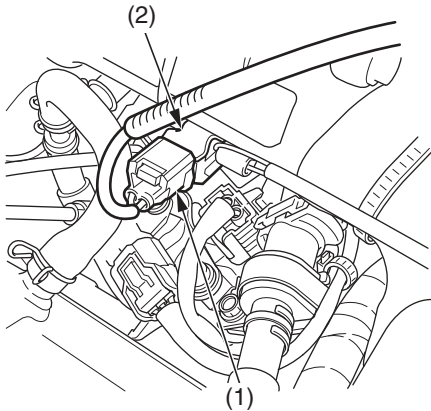

(1) fuel pump connector A (2) stay


3. Reposition the fuel tank and start the engine and let it idle until the engine stalls.

Fuel Line Replacement


Disconnection

1. Relieve the fuel pressure (this page).
2. Hang the fuel tank to the left side of the frame.
3. Remove the fuel quick connect fitting cover (1) from the fuel pump (2).
4. Check the fuel quick connect fitting (3) for dirt, and clean if necessary.
5. Remove the bolt (4), clamp and setting rubber (5).

Fuel pump side:

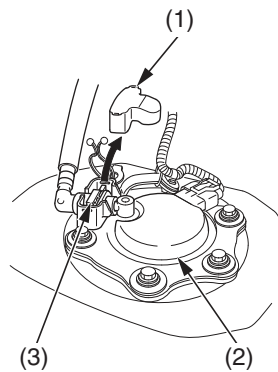


Injector side:

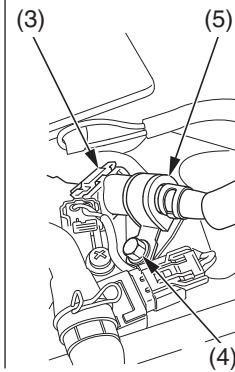


- (1) fuel quick connect fitting cover
- (2) fuel pump
- (3) fuel quick connect fitting
- (4) bolt
- (5) clamp and setting rubber

6. Place a shop towel (6) over the fuel quick connect fitting.

Fuel pump side:

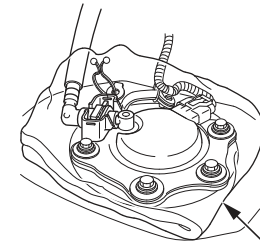

Injector side:

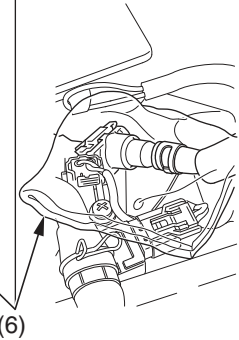

(6) shop towel

(cont'd)