

Fuel Tank

6. Slide the shroud (10) toward the down so that the shroud tab (11) and the slot (12) on the air cleaner housing cover (13) is aligned.

7. Install the shroud C bolt (14), B bolt (15) and shroud A bolt (16).


Tighten the shroud A and B bolts to the specified torque:

7 lbf·ft (10 N·m, 1.0 kgf·m)

Tighten the shroud C bolt to the specified torque:

3.8 lbf·ft (5.2 N·m, 0.5 kgf·m)

The right and left shrouds can be installed in the same manner.

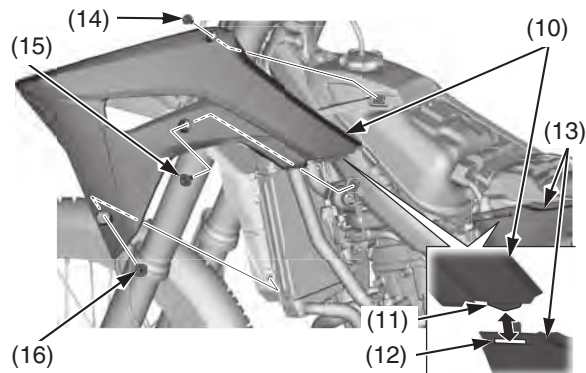

(10) shroud

(11) shroud tab

(12) slot

(13) air cleaner housing cover

(14) shroud C bolt

(15) shroud B bolt

(16) shroud A bolt

8. Install the seat (page 33).