

# ABS function on the rear wheel

## CRF250RLA

The ABS function on the rear wheel can be optionally turned off for off-road riding.

 
- ▶ Each time the ignition switch is turned to the **I** (On) position, the ABS function on both wheels will automatically be turned on.

## To turn off the ABS function on the rear wheel

- 1 Stop the motorcycle.
- 2 Press and hold the rear ABS switch until the rear ABS OFF indicator starts flashing, then release the switch while the indicator is flashing.
  - ▶ The rear ABS OFF indicator is on, when the ABS function on the rear wheel is turned off.
  - ▶ The ABS function on the rear wheel remains on, if the switch is released after indicator stops flashing.

## To turn on the ABS function on both wheels

- 1 Stop the motorcycle.
- 2 Press and hold the rear ABS switch until the rear ABS OFF indicator is turned off, or turn the ignition switch to the **O** (Off) position and the **I** (On) position.



**ABS function on both wheels is on.**



**ABS function on rear wheel is off.**

**Rear ABS switch**

