

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the right side cover. ➔ P. 56
2. Remove the air cleaner housing cover by removing the screws.
3. Release the tabs and pull out the air cleaner element.
4. Install the new air cleaner element.
▶ Make sure the air cleaner element is installed securely.
5. Install the parts in the reverse order of removal.

