


Spark Arrester ► Cleaning the Spark Arrester

5. Remove the spark arrester mounting bolts, spark arrester and gasket from the muffler.
6. Use a brush to remove carbon deposits from the spark arrester screen. Be careful to avoid damaging the spark arrester screen. The spark arrester must be free of breaks and holes. Replace, if necessary. Check the gasket. Replace, if necessary.

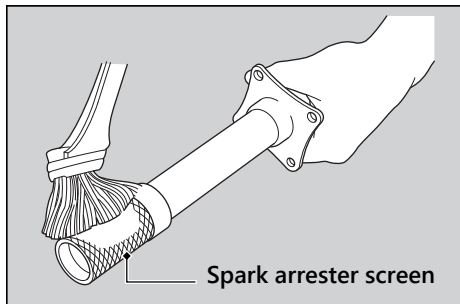

7. Install the gasket and the spark arrester, and tighten the spark arrester mounting bolts.

Torque: 6.6 lbf-ft (9.0 N·m, 0.9 kgf·m)

8. Install the tail cap cover and tighten the tail cap cover bolts.

Torque: 3.9 lbf-ft (5.25 N·m, 0.5 kgf·m)

9. Install the muffler cover and tighten the muffler cover bolts.

Torque: 1.1 lbf-ft (1.5 N·m, 0.2 kgf·m)

10. Install the right side cover. ► P. 56