

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 47

■ Fuse Box Fuses

1. Remove the left side cover. ► P. 56
2. Open the fuse box cover.
3. Pull the fuses out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box cover.
5. Install the left side cover.

