

Fuel Tank (CRF250R)

- Slide the shroud (10) toward the down so that the shroud tab (11) and the slot (12) on the air cleaner housing cover (13) is aligned.

- Install the shroud C bolt (14), B bolt (15) and shroud A bolt (16).


Tighten the shroud A and B bolts to the specified torque:

7 lbf·ft (10 N·m, 1.0 kgf·m)

Tighten the shroud C bolt to the specified torque:

3.8 lbf·ft (5.2 N·m, 0.5 kgf·m)

The right and left shrouds can be installed in the same manner.

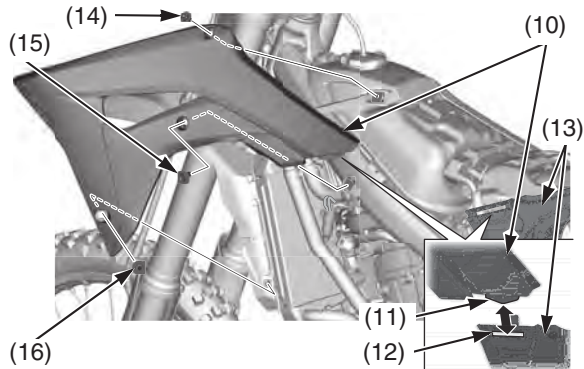

- | | |
|--------------------------------|--------------------|
| (10) shroud | (14) shroud C bolt |
| (11) shroud tab | (15) shroud B bolt |
| (12) slot | (16) shroud A bolt |
| (13) air cleaner housing cover | |

- Install the seat (page 33).