


# Exhaust Pipe/Muffler

## Exhaust Pipe Removal

1. Remove the right and left mufflers (page 131).
2. Remove the exhaust pipe joint nuts (1), left exhaust pipe (2), right exhaust pipe (3) and exhaust pipe gaskets (4).

Right side

Left side

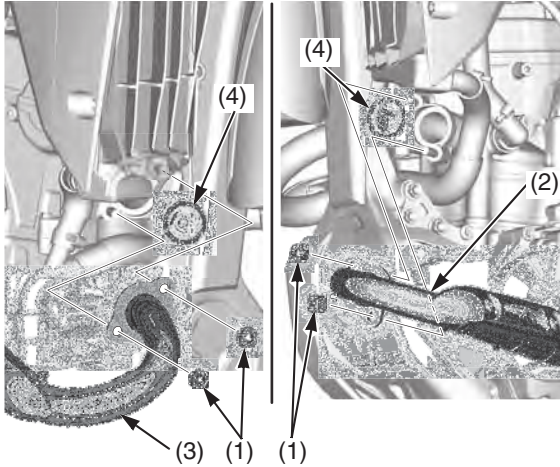


- (1) exhaust pipe joint nuts
- (2) left exhaust pipe
- (3) right exhaust pipe
- (4) exhaust pipe gaskets

## Exhaust Pipe Installation

1. Install new exhaust pipe gaskets (1).
2. Install the left exhaust pipe (2), right exhaust pipe (3) and exhaust pipe joint nuts (4) but do not tighten the nuts yet.

Right side

Left side

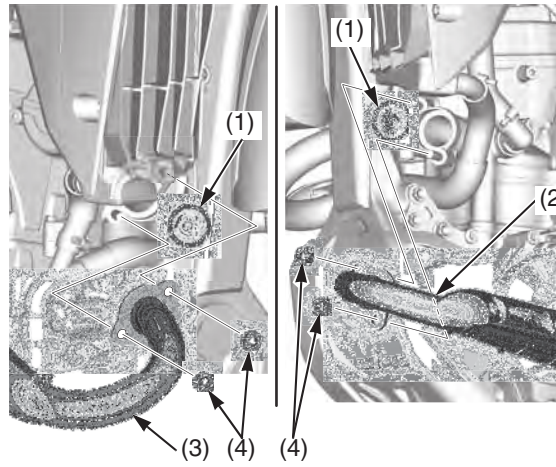

- (1) exhaust pipe gaskets (new)
- (2) left exhaust pipe
- (3) right exhaust pipe
- (4) exhaust pipe joint nuts

3. Install the left and right mufflers (page 132) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:  
15 lbf·ft (21 N·m, 2.1 kgf·m)
5. Tighten the left muffler clamp bolt, left muffler mounting A bolt and B bolt (page 132).
6. Tighten the right muffler clamp bolt, right muffler mounting A bolt and B bolt (page 133).