


# Seat

Refer to *Important Safety Precautions* on page 23.

## Removal


1. Remove the seat mounting bolts (1) and collars (2).
2. Remove the seat (3) by pulling it backward.

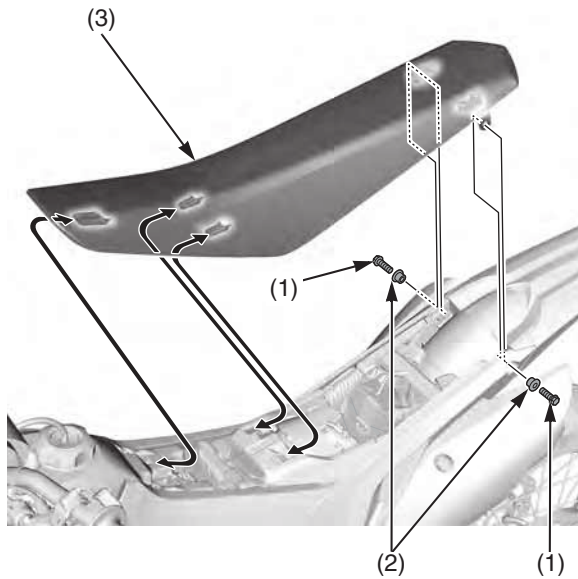

(1) seat mounting bolts  
(2) collars  
(3) seat

## Installation

1. Install the seat while aligning the seat front prong (1) with the slot (2) of the fuel tank and seat center prongs (3) with the seat support base slots (4).
2. Install and tighten the collars (5) and seat mounting bolts (6) to the specified torque:  
19 lbf·ft (26 N·m, 2.7 kgf·m)

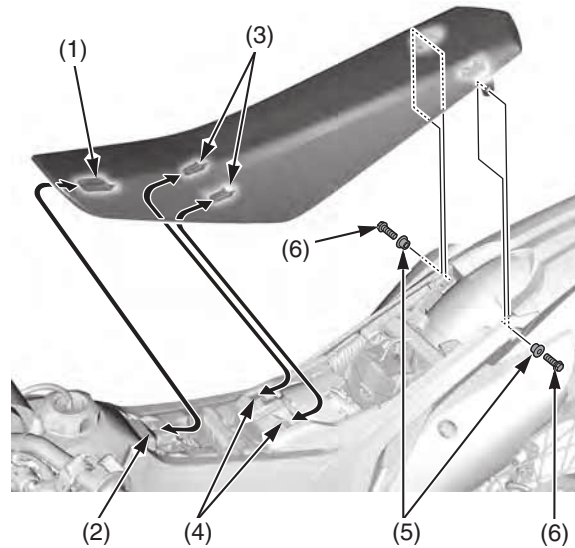

(1) seat front prong  
(2) slot  
(3) seat center prongs  
(4) seat support base slots  
(5) collars  
(6) seat mounting bolts