


Fuel Tank Removal


Installation

1. Install the fuel tank on the frame.
2. Install the fuel valve (1) and tighten the bolt (2).
3. Connect the fuel line (3) to the fuel valve.

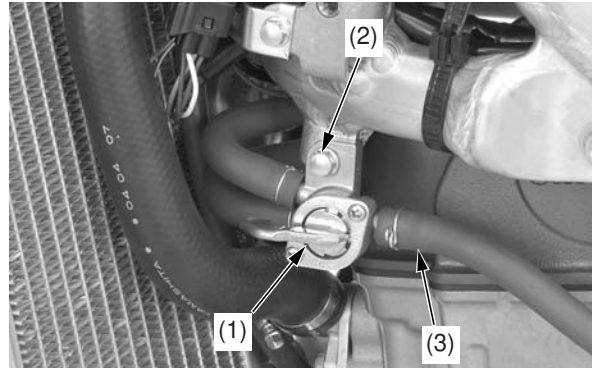


(1) fuel valve (2) bolt
(3) fuel line

4. Install the collar and fuel tank bolt (4) and tighten it.
5. Hook the air cleaner cover rubber (5).
6. Install the fuel tank band (6).
7. Put the breather tube (7) in the steering stem nut.

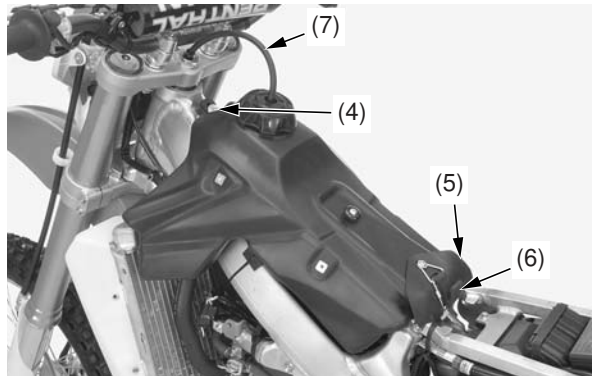


(4) fuel tank bolt/collar (5) air cleaner cover rubber
(6) fuel tank band (7) breather tube

8. Install the shroud (8) by aligning its tab (11) with subframe (12).

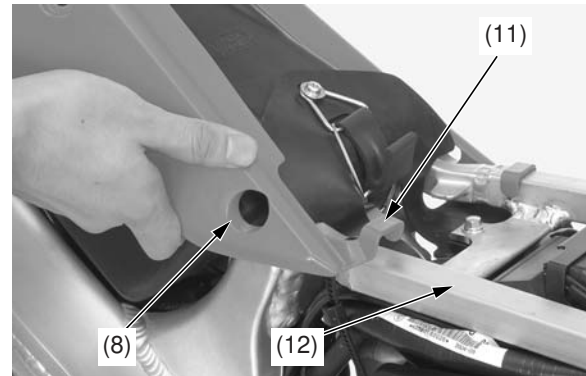

(8) shroud (11) tab
(12) subframe

9. Install the shroud B bolts (9) and shroud A bolts/collars (10).
10. Tighten the shroud B bolts to the specified torque:
5 N·m (0.5 kgf·m, 3.7 lbf·ft)

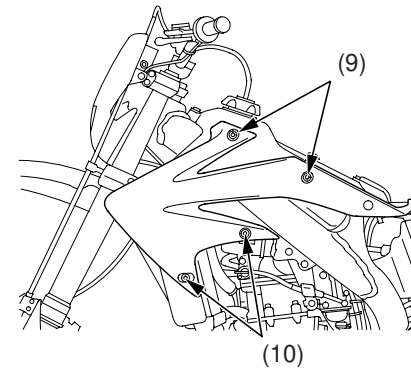

(9) shroud B bolts
(10) shroud A bolts/collars

11. Install the seat (page 36).