


### Fluid Level Inspection

#### Front Brake Fluid Level Check

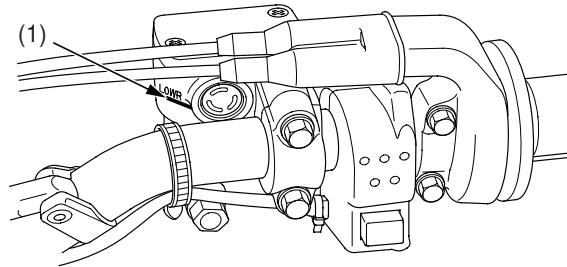

(1) LOWER level mark


With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER level mark (1). If the level is at or below the LOWER level mark, check the brake pads for wear (page 91).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the brake lever freeplay exceeds 20 mm (0.8 in), there is probably air in the brake system and it must be bled. Refer to the Honda Shop Manual or see your Honda dealer for brake bleeding.

#### Rear Brake Fluid Level Check

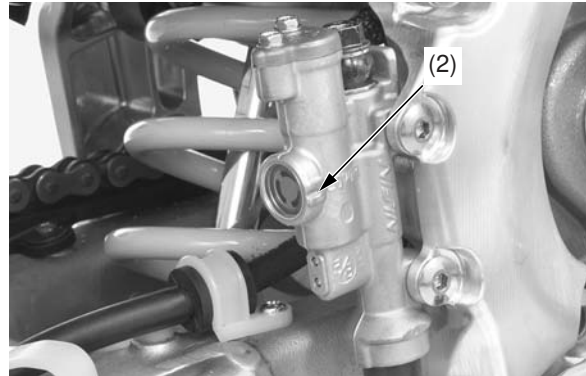

(2) LOWER level mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER level mark (2). If the level is at or below the LOWER level mark, check the brake pads for wear (page 91).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the brake pedal freeplay exceeds 20 mm (0.8 in), there is probably air in the brake system and it must be bled. Refer to the Honda Shop Manual or see your Honda dealer for brake bleeding.