


Headlight & Taillight

Refer to *Safety Precaution* on page 25.


Headlight Bulb

1. Remove the front visor bolts (1) and pull out the front visor (2).

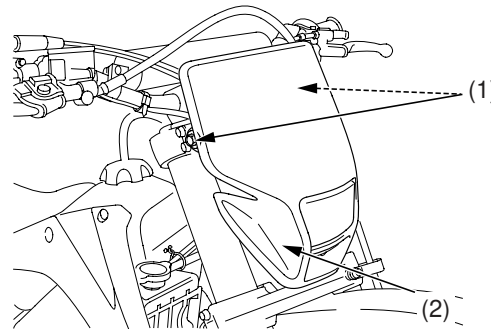


- (1) front visor bolts
(2) front visor

2. Release the headlight connector (4) from the clamp (3) and disconnect the headlight connector. Remove the dust cover (5).

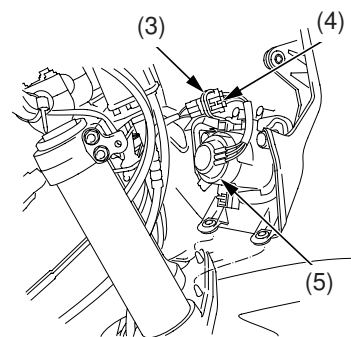

- (3) clamp
(4) headlight connector
(5) dust cover


3. To pull the headlight bulb out, push and turn the headlight bulb socket (6) counterclockwise.

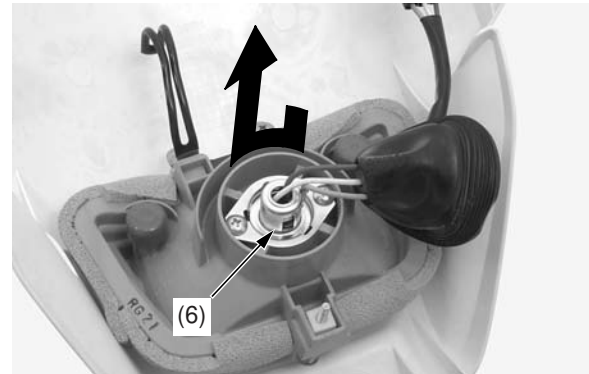

(6) headlight bulb socket


4. Install a new headlight bulb (7) into the headlight unit while aligning the tab (8) with the groove (9) of the headlight unit.

If you touch the bulb with your bare hands, clean it with a cloth moistened with denatured alcohol to prevent early bulb failure.

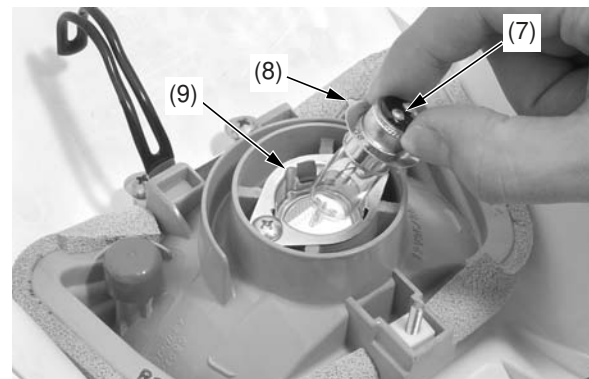


(7) headlight bulb
(8) tab
(9) groove

5. While pushing the headlight bulb socket (6), turn it clockwise and install the headlight bulb socket.
6. Install the dust cover (5) tightly against the headlight unit with its "TOP" mark (10) facing up.

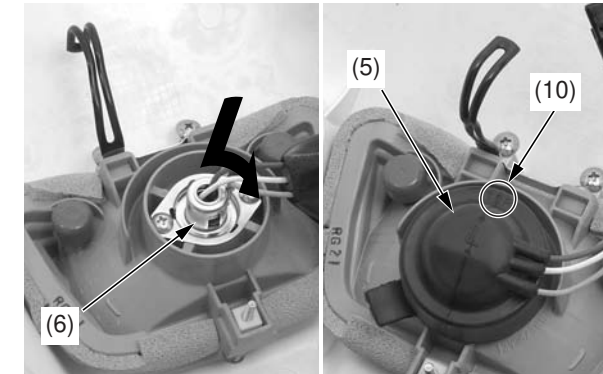

(5) dust cover
(6) headlight bulb socket
(10) "TOP" mark

7. Connect the headlight connector (4) and install it to the clamp (3). Install the front visor by aligning its grommets (11) with the tabs (12) on the steering stem. Install and tighten the front visor bolts.

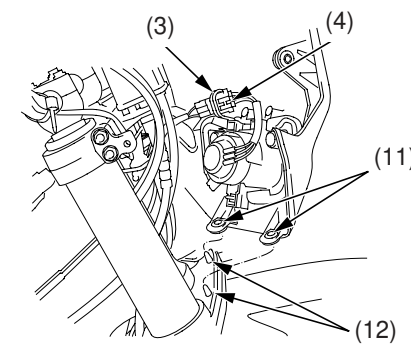

(3) clamp
(4) headlight connector
(11) grommets
(12) tabs