## **Vehicle Identification**


## **Serial Numbers**

The VIN and engine serial numbers are required when you register your CRF. They may also be required when ordering replacement parts.

The VIN number (1) is stamped on the right side of the steering head.

VIN


## RIGHT SIDE

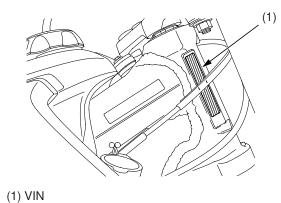

The engine number (2) is stamped on the left crankcase.

ENGINE No.

## LEFT SIDE

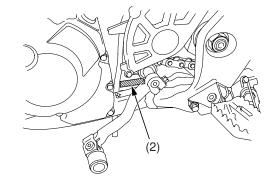

(2) engine number