


After adjustment, push the brake arm (4) to confirm that there is a gap between the adjusting nut (2) and the brake arm pin (3).

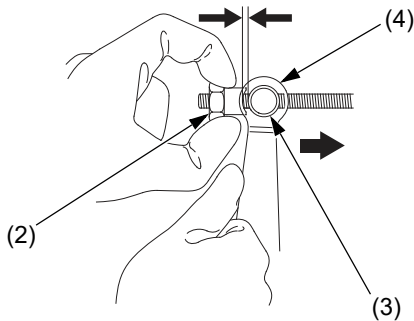

(2) adjusting nut  
(3) brake arm pin


(4) brake arm

After adjustment, confirm the freeplay of the brake pedal.

## Brake Shoe Wear

The front and rear brakes are equipped with external brake wear indicators that let you check brake wear without disassembly. Application of the brake control (lever or pedal) causes the arrow on the brake arm to move toward a reference mark on the brake panel.

### LEFT FRONT

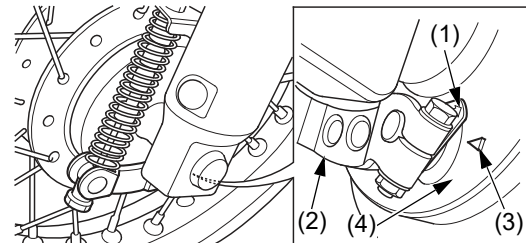

(1) arrow  
(2) brake arm

(3) reference mark  
(4) brake panel