

7. Fill the crankcase with the recommended oil (► P. 40, ► P. 107) and install the oil fill cap/dipstick.

Required oil

When changing oil:

1.1 L (1.2 US qt, 1.0 Imp qt)

8. Check the oil level. ► P. 57
9. Check that there are no oil leaks.