


## Headlight Case

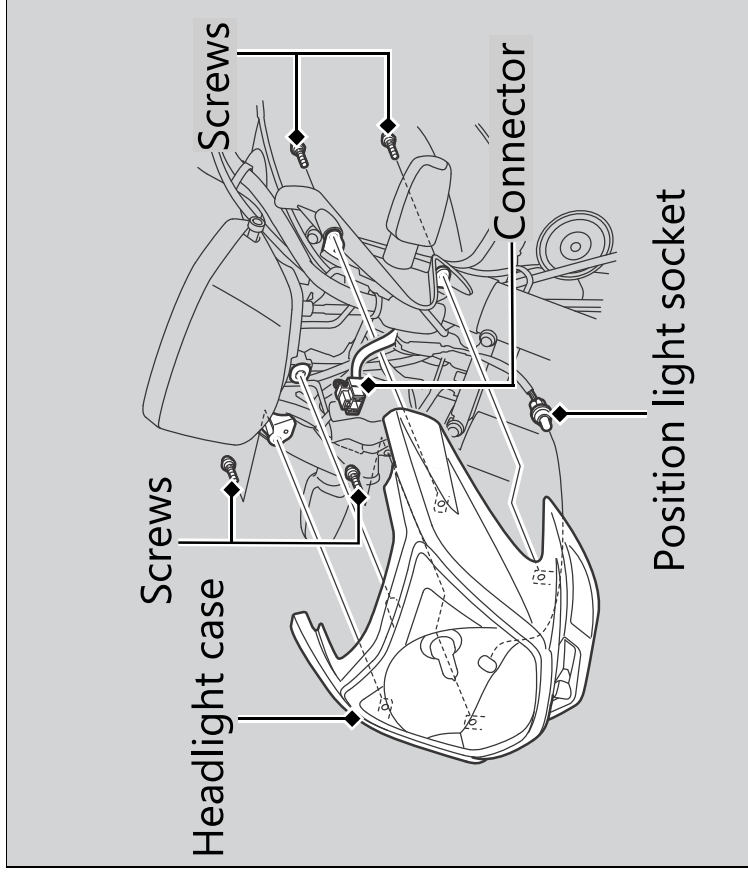

## Removal

1. Remove the screws.
2. Remove the headlight case.
3. Disconnect the connector and pull out the position light socket.

## Installation

Install the parts in the reverse order of removal.