


Left Side Cover

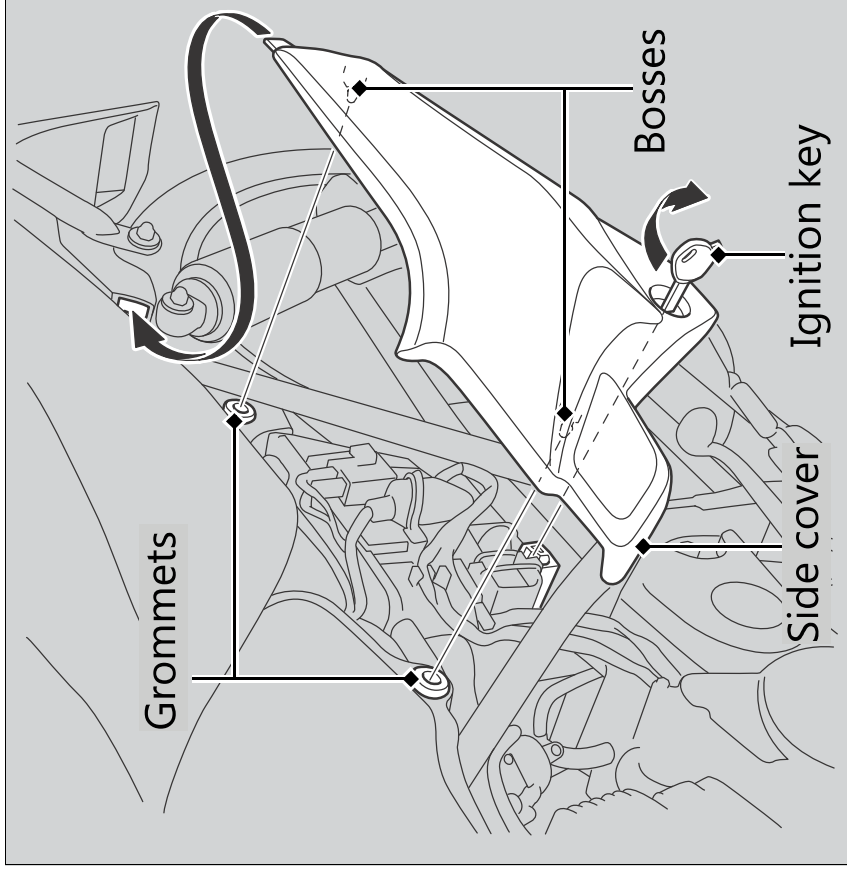

Removal

1. Insert the ignition key and turn it clockwise.
2. Carefully pull the side cover out from the grommets.

Installation

1. Align the bosses with the grommets.
2. Push the side cover into position while turning the ignition key clockwise.