

Front Wheel

Removal

1. Place your motorcycle on its centre stand on a firm, level surface.
2. Rise the front wheel off the ground by placing a support block under the engine.
3. Remove the speedometer cable by removing the screw.
4. Remove the front brake adjusting nut and remove the front brake cable from the brake arm.
5. Remove the front axle nut.
6. Remove the front axle shaft, front wheel, and side collar.

