

Maintenance Schedule

		FREQUENCY		ODOMETER READING (Note 1)							Refer to
				× 1,000 mi	4	8	12	16	20	24	
ITEM		NOTE	× 1,000 km	6.4	12.8	19.2	25.6	32.0	38.4		
NON-EMISSIONS-RELATED ITEMS					I		I		R	150	
		5		I	I	R	I	I	R	159	
				I	I	I	I	I	I	161	
					I		I		I	162	
	*					I		I		—	
	*					I		I		—	
						I		I		152	
		5		I	I	R	I	I	R	153	
						I		I		170	
	*					I		I		—	
	*					I		I		—	
	**					I		I		—	
	**					I		I		—	

- * Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 230).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.