

Engine Oil & Filter

Install a New Oil Filter:


6. Remove the oil filter with a filter wrench and let the remaining oil drain out.
Discard the oil filter in an approved manner (page 185).
7. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 185).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.

LEFT FRONT, UNDER ENGINE

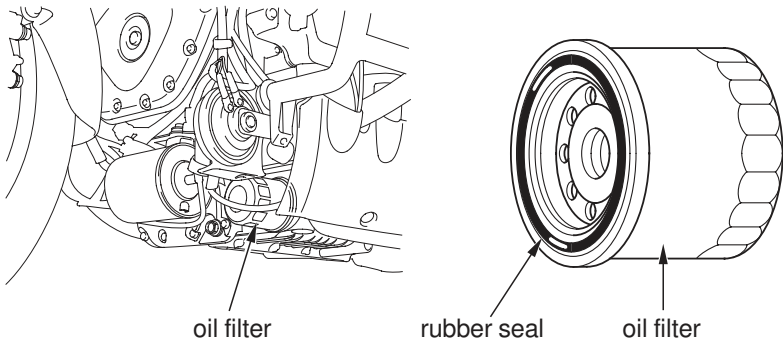

9. Install the new oil filter and tighten it by hand.
10. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:
19 lbf·ft (26 N·m , 2.7 kgf·m)
11. Install a new sealing washer onto the drain bolt.
Install the engine oil drain bolt and tighten it to the specified torque:
25 lbf·ft (34 N·m , 3.5 kgf·m)