Digital Clock

The display shows the hour and minute.

To adjust the time:

- 1. Turn the ignition switch to ON or ACC.
- 2. Push the SETUP button once. "CLOCK ADJUST" will display.
- 3. To set the hour, press and release the INFO button until the desired hour appears.
 - Quick setting push and hold the INFO button until the desired hour appears.
- 4. To set the minute, press and release the TRIP button until the desired minute appears.
 - Quick setting push and hold the TRIP button until the desired minute appears.
- 5. Once the time is selected, push the SETUP button to enter the time.

When approximately 5 seconds pass without operating a button on the CLOCK ADJUST display, the display automatically returns to the previous display.

Be sure to push the SETUP button to enter your adjusted time in the system.

