

# Cover Removal

## Side Cover Removal

Refer to *Safety Precautions* on [page 122](#).

The right side cover must be removed for suspension adjustment.  
The left side cover must be removed for battery and fuse maintenance.

### NOTICE

*Failure to use extreme care removing or installing the side covers may damage the side cover prongs.*

### Removal

1. Open the saddlebag ([page 47](#)).
2. Pull the side cover out until the prongs A are clear of the frame grommets.
3. Carefully pull the side cover out until the prongs B are clear of the frame grommets.
4. Carefully remove the side cover.

### Installation

1. Insert the top edge of the side cover under the seat.
2. Position the side cover so the prongs on the inside of the cover are lined up above their securing grommets.
3. Push the cover in place.
4. Close the saddlebag.

### LEFT SIDE

