

# Cover Removal

## Front Lower Cover Removal

Refer to *Safety Precautions* on [page 122](#).

The front lower cover must be removed for engine oil maintenance.

### Removal

1. Remove the clips.
2. Remove the front lower cover by removing the bolts A and bolts B.

### Installation

- Installation can be done in the reverse order of removal.

FRONT

