

# Multi Information Display

## Digital Clock

The display shows the hour and minute.

To adjust the time:

1. Turn the ignition switch to ON or ACC.
2. Push the SETUP button once. "CLOCK ADJUST" will display.
3. To set the hour, press and release the INFO button until the desired hour appears.
  - Quick setting — push and hold the INFO button until the desired hour appears.
4. To set the minute, press and release the TRIP button until the desired minute appears.
  - Quick setting — push and hold the TRIP button until the desired minute appears.
5. Once the time is selected, push the SETUP button to enter the time.

When approximately 5 seconds pass without operating a button on the CLOCK ADJUST display, the display automatically returns to the previous display.

Be sure to push the SETUP button to enter your adjusted time in the system.

