

iPod[®] /USB Flash Drive

You can also change or select playlists, artists and albums on the iPod[®] menu, use the TUNE/CH lever (see page 107).

Use the TUNE/CH lever while an iPod[®] is playing to change files.

Push the TUNE/CH lever up to change to the next file.

Push the TUNE/CH lever down to change to the previous file.

