


# iPod® /USB Flash Drive

---

RETURN button    TITLE button

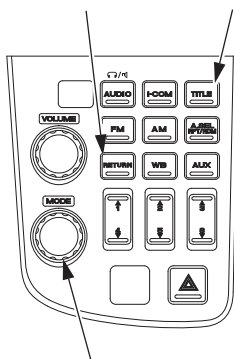


MODE knob/button

You can also change or select files and folders by using TUNE/CH lever while a USB flash drive is playing files.

Push the TUNE/CH lever up to change to the next file.

Push the TUNE/CH lever down to change to the previous file.

To change the folders, push and hold the TUNE/CH lever up or down.

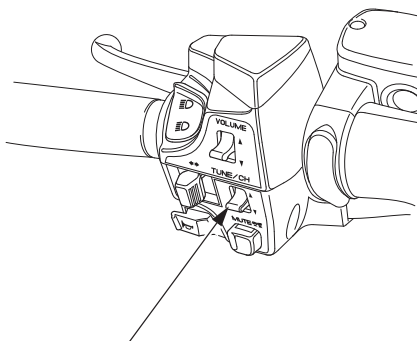

TUNE/CH lever