

Maintenance Schedule

			FREQUENCY		ODOMETER READING (Note 1)						
				NOTE	x 1,000 mi	4	8	12	16	20	24
ITEM				x 1,000 km	6.4	12.8	19.2	25.6	32.0	38.4	
EMISSIONS-RELATED ITEMS	*	FUEL LINE				I		I		I	-
	*	THROTTLE OPERATION				I		I		I	-
	*	AIR CLEANER	2				R			R	-
		CRANKCASE BREATHER	3		C	C	C	C	C	C	153
		SPARK PLUGS			EVERY 16,000 mi (25,600 km) R						158
	*	VALVE CLEARANCE	4		EVERY 32,000 mi (51,200 km) I						-
		ENGINE OIL	6		R		R		R		143
		ENGINE OIL FILTER			R		R		R		147
	*	ENGINE IDLE SPEED			I		I		I		-
		RADIATOR COOLANT	5			I		I		R	150
	*	COOLING SYSTEM				I		I		I	-
	*	SECONDARY AIR SUPPLY SYSTEM				I		I		I	-
*	EVAPORATIVE EMISSION CONTROL SYSTEM					I			I	-	

* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 234).