

### Ext. Amp

You can enable/disable audio output when an external amplifier is connected.

If you want to install an external amplifier, contact your dealer.



- 1 Select [Ext. Amp], and then press or **ENT** switch to select (enable) or deselect (disable) the function.
- 2 Return to the previous screen or the Home screen. **P.24**

**Default:** Off (deselected)

### EQ1/EQ2 (Equalizer)

You can select from two equalizer curves according to the specifications of your vehicle (equipped with 4 speakers or 2 speakers).



- 1 Select [EQ1] or [EQ2], and then press or **ENT** switch to change the equalizer curve.
  - [EQ1]: for models equipped with 4 speakers
  - [EQ2]: for models equipped with 2 speakers
- 2 Return to the previous screen or the Home screen. **P.24**

### Head Light Opening

You can enable/disable the headlight startup lighting when the ignition switch is turned ON.



- 1 Select [Headlight opening], and then press or **ENT** switch to select (enable) or deselect (disable) the function.
- 2 Return to the previous screen or the Home screen. **P.24**

**Default:** On (selected)