


Instruments (Continued)

INFO 1 Display

Odometer & Tripmeter display

Cruise control set speed &
Air temperature gauge display

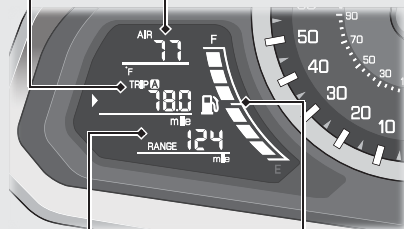

Fuel gauge

GL1800/D/DA Available driving distance
& Tire pressure gauge display

GL1800B/BD Available driving distance
display


INFO 1 display contains the following:

- Cruise control set speed () and Air temperature gauge [AIR] display **➔ P.35**
- Odometer [TOTAL] & Tripmeter [TRIP A/ TRIP B] display **➔ P.36**

- **GL1800/D/DA** Available driving distance [RANGE] & Tire pressure gauge [FR/RR] display **➔ P.37**
- **GL1800B/BD** Available driving distance [RANGE] display **➔ P.37**
- Fuel gauge **➔ P.38**

Changing the INFO 1 Display

Press **SEL** button to move the cursor to a desired display.

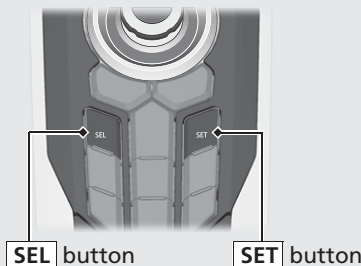

SEL button

SET button

GL1800/D/DA

Odometer & Tripmeter display

Cruise control set speed &
Air temperature gauge display



Available driving distance &
Tire pressure gauge display

➔ Press **SEL** button.